




Kodak EasyShare M2008 Lens Replacement

How to safely and properly remove and replace the lens from your device.

Written By: Brian

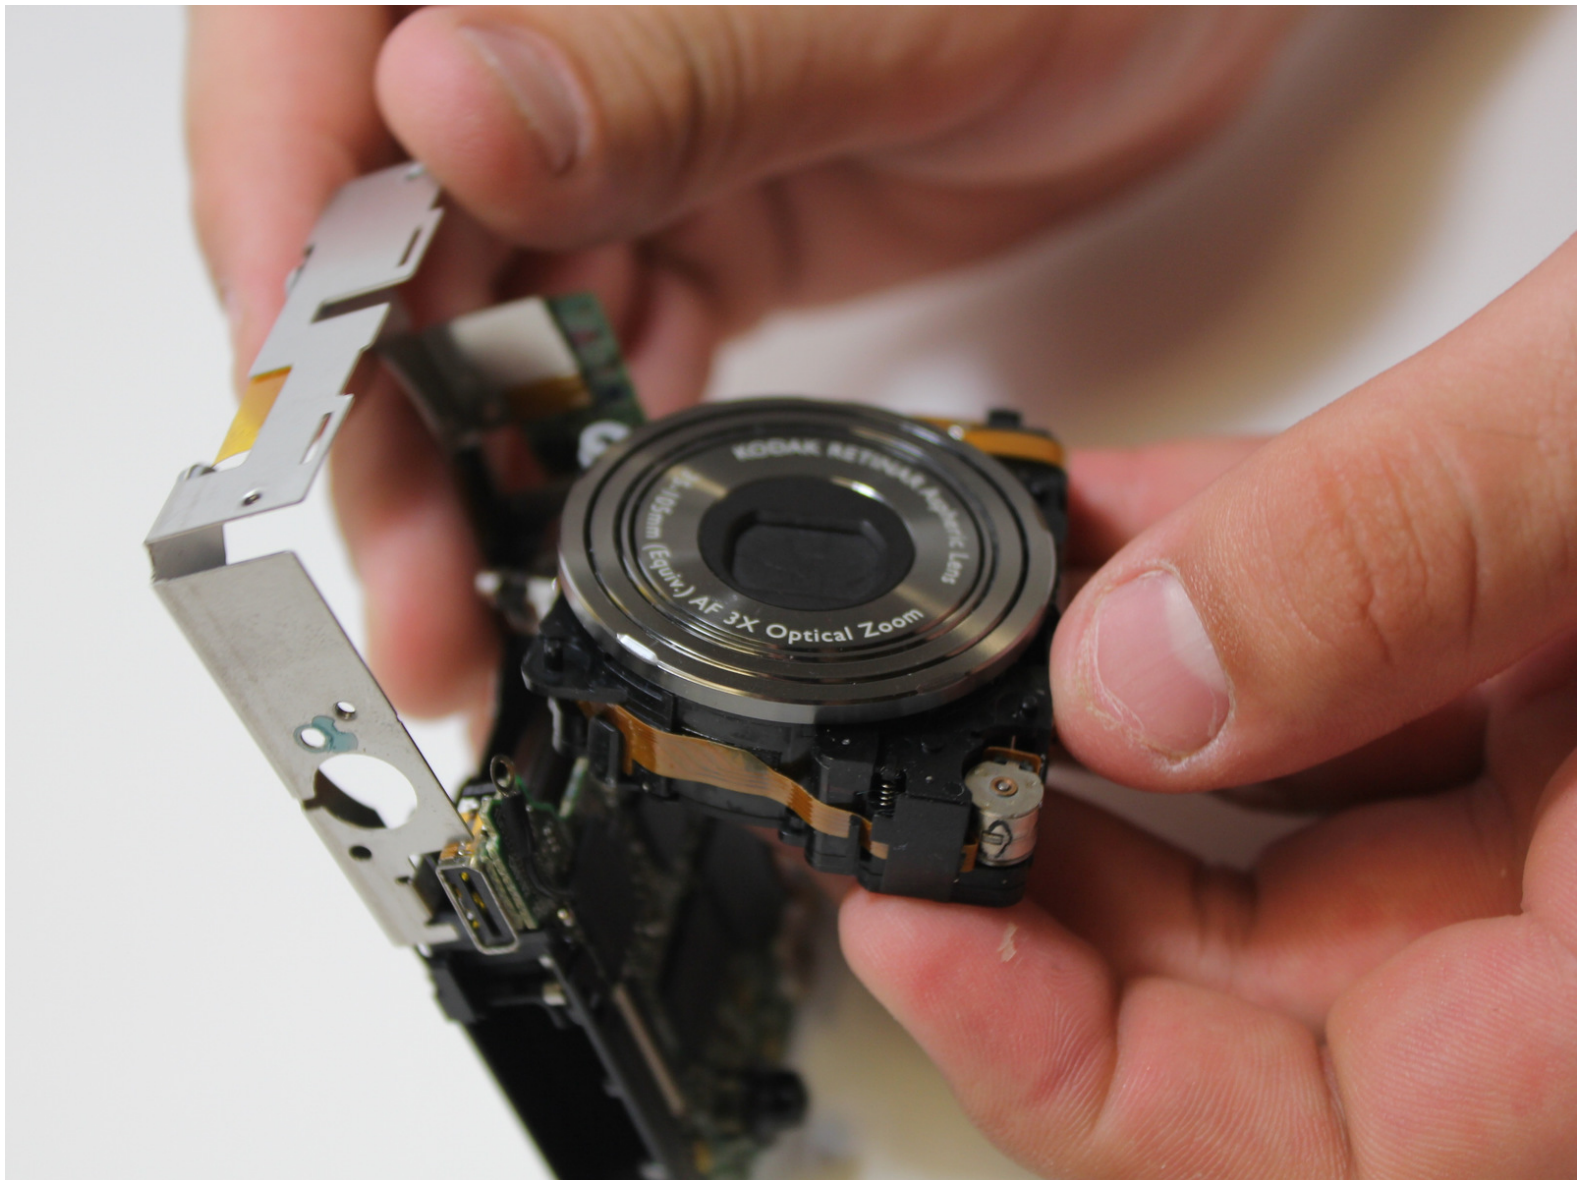



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.

Step 2

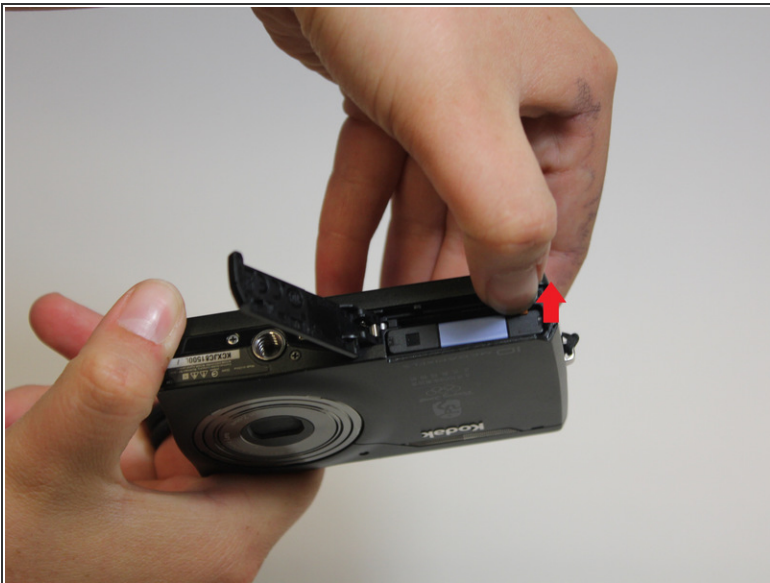



- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.

Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.
- ⓘ Righty tighty, lefty loosey!

Step 4

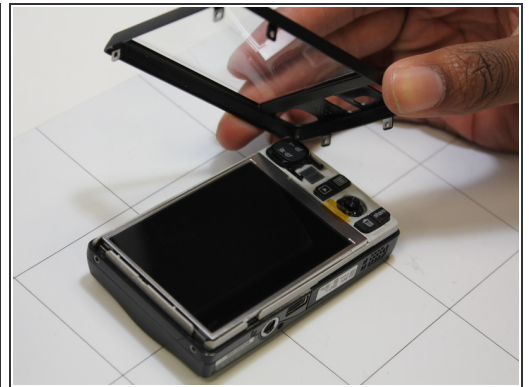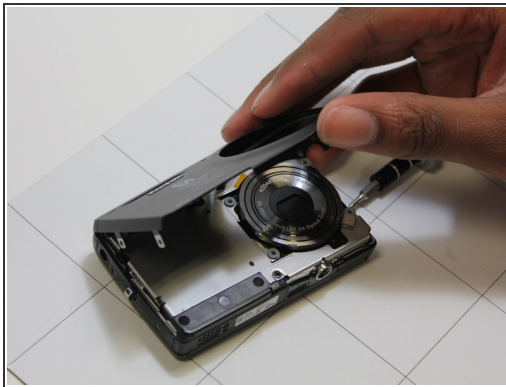

- Gently lift off front and back casing.

Step 5






- Remove screws along side.
- Gently peel off side casing.

Step 6 — Lens




- Remove screws from front silver panel.

Step 7

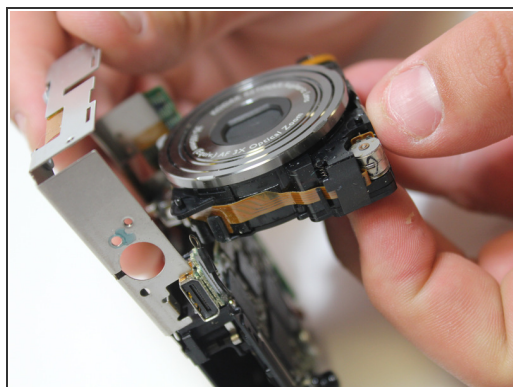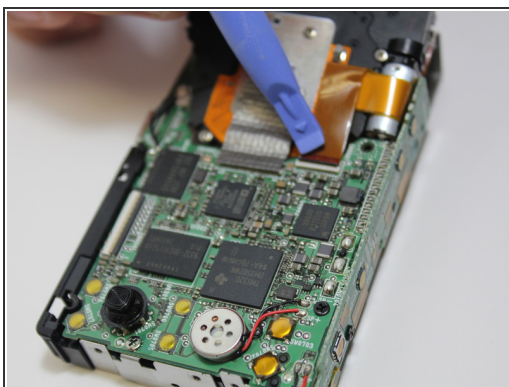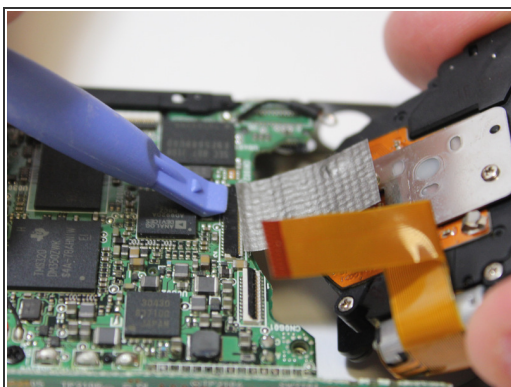

- Lift up ribbon cable fastener with blue plastic opening tool.
- Gently pull out lens.

Step 8

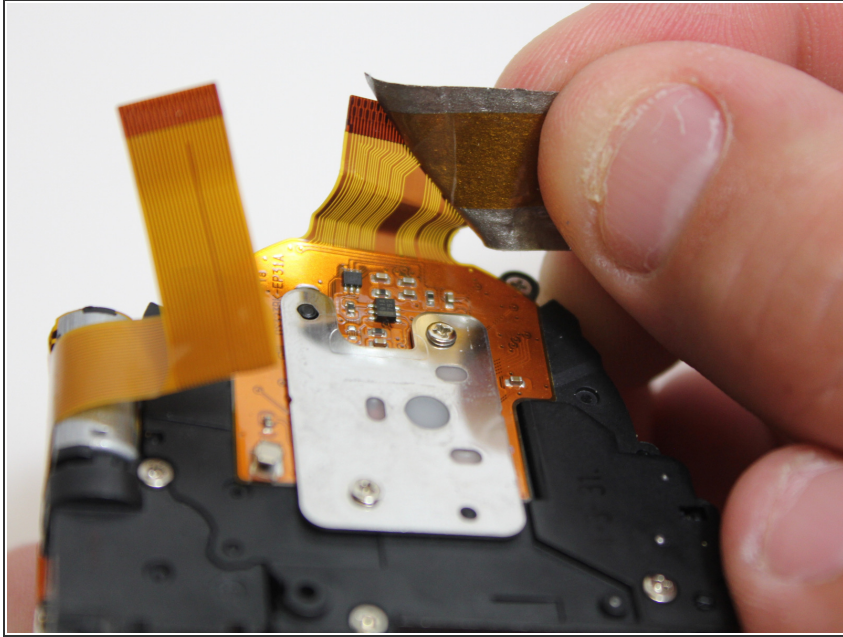

- To place new lens, peel off silver tape before inserting ribbon cable into proper slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 02:22:21 PM.